

# Triple Input / Output Module with Isolator **EV-310**

Part no. F16-82265

### General Description

EV-3IO is a Triple Input / Output module, with integral –ve line Short circuit isolator compatible with Evolution analogue addressable system devices.

The Module includes setting options for a normally closed contact input and Fail Safe mode for Door release requirement.

LEDs are provided to Indicate Input & Output active, Fault and Isolator Open. Remote LED outputs are provided Relay status, Fault and Isolator Open indication.

Device address may be set using EV-AD2-EXT Hand held programmer.

The Short Circuit Isolator will protect the system, whilst allowing the device to continue communication from the opposite side. The isolator will self-reset when the fault clears.

The following resistors are required for Fault and Alarm monitoring:

EOL = 10k Ohm
 Alarm = 470 / 680 Ohm

## **Approvals**

Test Standards EN54-17: 2005 / AC: 2007

EN54-18: 2005 / AC: 2007

CPR Certificate 0359-CPR-00641

DoP Number 00641

#### Data

Operating loop voltage 20 to 38 Vdc

Quiescent current 860 µA

Alarm current 8.3 mA

Current in short circuit 15 mA

Inputs 3 x Class B

Output relay contact rating 2 x I Amps @ 30 Vdc

I x 5 Amps @ 240 Vac or 5 Amps @ 30 Vdc

Operating temperature -10°C to +55°C
Storage temperature -25°C to +65°C

Relative humidity < RH 95% (Non-condensing)

Cable terminals 0.75 to 2.5 mm<sup>2</sup>

Material PC/ABS
Weight 475 g

#### **Short Circuit Isolator**


Minimum sw open voltage (Vso min)I I VdcMaximum sw open voltage (Vso max)14 VdcMinimum sw close voltage (Vsc min)3 VdcMaximum sw close voltage (Vsc max)10 VdcMaximum line current (Ic max)500 mAMaximum switching current (Is max)1500 mAMaximum leakage current (Il max)15 mAMaximum switch resistance (Zc max)150 mΩ

All wiring must conform to the current edition of IEE Wiring regulations and BS5839 Part I, or Local National Wiring regulations.

All loop Cable Screens shall be connected together, but must be Isolated from Ground. Cable Screens shall be connected to Earth Ground within the Control Panel ONLY.



# Dimensions mm(in)

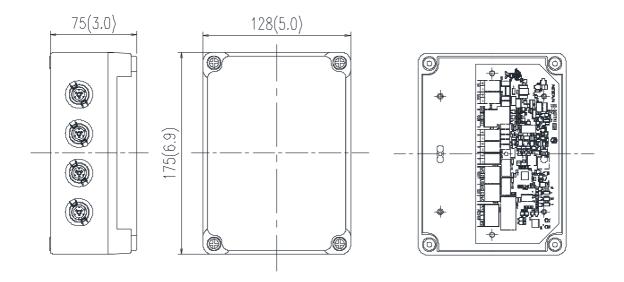

## Connections

