EV-MCP2-SCI-IP67 Installation instructions

- 1. Carefully knock out the holes for the Cables glands, or conduit, required for the installation. Fix Waterproof Back Box to wall using screws through the pre-drilled holes. Note: Do NOT make additional holes in the waterproof cavity.
- 2. Insert the "O" Ring into the Red section of the Call Point as shown in Figure 1 below.


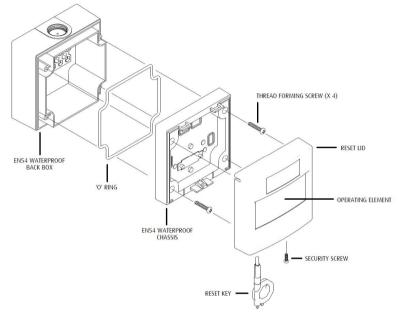


Figure 1

- 3. Set the device address using the 8-Way DIL switch on the reverse of the Unit.
- **4.** Make the Loop connections as shown in figure 2 below and on the product Label. An Earth point is provided in the Back Box moulding if required.

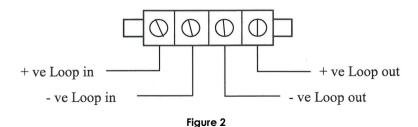

EV-MCP2-SCI-IP67 Installation instructions

- **5.** Fasten the Waterproof Chassis to the Back Box, then fit the Reset Lid to the unit, as shown in Figure 1, using the screws provided.
- **6.** To Activate the Call Point, Press the Operating Face, where indicated by the arrows, until it Clicks and the Yellow/Black flag is clearly visible.
- 7. To Reset the Call Point, Insert the Reset Key where shown in Figure 1 and turn anti-clockwise until it Clicks and the Yellow/Black flag has retracted from view.



NOTES:

Not compatible with Advanced MxPro4 (Mx4000) Panel. Please use Non-SCI model.

It is not possible to mix +ve and -ve isolator styles on a system.